



SKOTTEL BRAAI

MODEL No: 83095-13








USER INSTRUCTIONS

GB

NOTE! PRODUCT MAY VARY FROM ILLUSTRATIONS

503-0093 LEV10



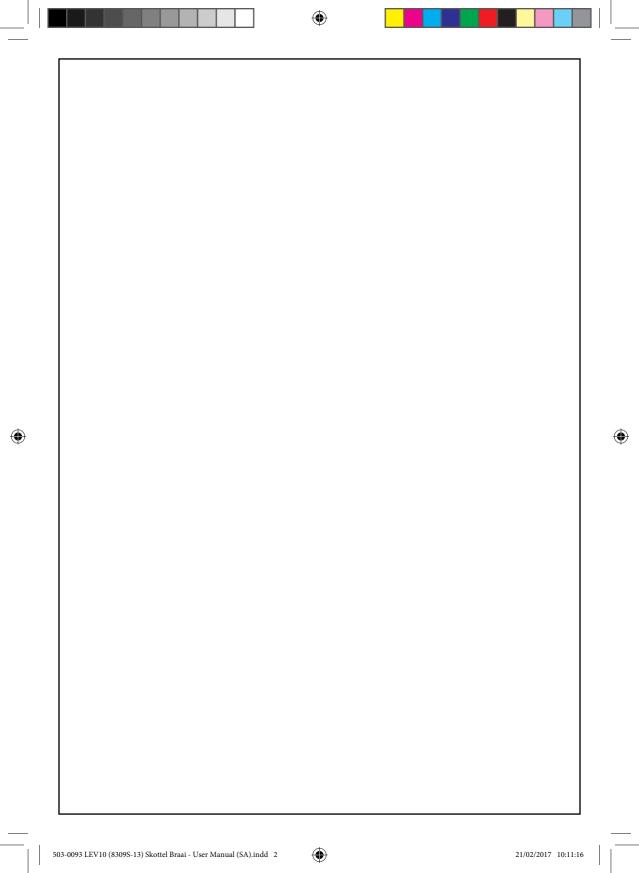





CAUTION

This appliance is for outdoor use only! Provide ample ventilation. This gas appliance consumes air (oxygen). Do not use this appliance in an unventilated space to avoid endangering your life. If still more gas appliances and/or occupants using gas are added to the space, additional ventilation must be provided.

IMPORTANT

Read these instructions carefully so as to familiarise yourself with the appliance before connecting it to a gas cylinder.

Retain these instructions for future reference.


1. Introduction

- This appliance complies with SANS 1539:2012
- This appliance shall be used exclusively on CADAC domestic gas cylinders.
- It may be hazardous to attempt to fit the appliance to other types of gas cylinders.
- Appliance category: Cylinder Vapour Pressure propane / butane mixture (LPG).
- Nominal consumption: 203 g/hr
- Nominal Heat Input: 2.8 kW
- This appliance uses a unique No.23 CADAC jet. (See Section 9).
- Gas appliances require ventilation for efficient performance and to ensure the safety of users and other persons in close proximity.
- Lise Outdoors Only

2. Safety information

- Check that the seal (K) between the Stem (E) and the gas cylinder is in place and in good condition before connecting to the gas cylinder (See Fig. 2.)
- Do not use the appliance if it has a damaged or worn seal.
- Do not use an appliance that is leaking, damaged or which does not operate properly.
- . Use this appliance only on a firm level surface.
- Ensure the appliance is used away from flammable materials. Minimum safe distances are: Above the appliance 1.2m. At the rear and sides 0,6m (See Fig.
- Ensure that the appliance is fitted to the gas cylinder in a well-ventilated location, preferably outdoors, away from any sources of ignition, such as naked flames, pilots, electric fires and away from other people.
- If there is a leak on your appliance (smell of gas), take it outside immediately
 into a well-ventilated flame free location where the leak may be detected and
 stopped. If you wish to check for leaks on your appliance, do it outside. Do not
- try to detect leaks using a flame, use soapy water.

 In the event of light back (where the flame burns back and ignites at the jet (G) immediately turn off the gas supply by closing the cylinder valve using the control knob (See fig. 2). After the flame is extinguished, re-light the appliance as described in Section 4 below. Should the flame light back again, return the appliance to your authorised CADAC repair agent.

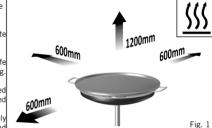

3. Assembly Instructions

- . The CADAC Skottel Braai is easy to assemble and prepare for use.
- To fit the stem (E) to the gas cylinder, first check that the cylinder valve is in the "off" position by turning the control knob clockwise to its "stop" (See Fig. 2). Screw the stem into the cylinder in a clockwise direction until it is fully engaged.
- Tighten by hand only.
- The pot / paella stand fulfills a dual purpose. Its is used to place a pot on it to boil water, or for cooking, as well as a stand for the paella
 pan.

Skottel

- Place the burner pan (B) on the stem, making sure that the burner tube fully engages on the stem (E).
- Place the skottel (A) on the burner pan, making sure that the skottel locators sit properly on the outside lip of the Burner Pan (B).

Paella Pan


- Place the burner pan (B) on the stem, making sure that the burner tube fully engages on the stem (E).
- Place the pot/ paella stand (D) on the burner pan, ensuring that the three hooks sit correctly on the inside of the Burner Pan (B)
- Place the paella pan (Product code 8628 / 5758), onto the pot / paella stand (D).
- WARNING!: When pre-heating, do not use the paella pan on a high-flame setting for more than 15 minutes, as this can damage the non-stick coating and the pan

<u>Pots</u>

- Place the burner pan (B) on the stem, making sure that the burner tube fully engages on the stem (E).
- Place the pot/ paella stand (D) on the burner pan, ensuring that the three hooks sit correctly on the inside of the Burner Pan (B)
- · Place a pot, onto the pot / paella stand (D). Please note, the pot size must not exceed 400mm in diameter.





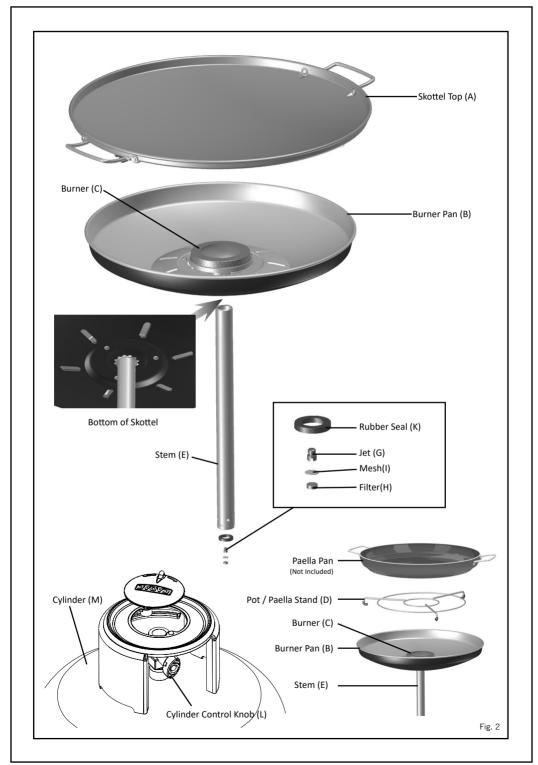







4. Operating the Appliance

- CAUTION: Accessible parts may become very hot. Keep young children away from the appliance.
- WARNING!: When pre-heating, do not use the paella pan on a high-flame setting for more than 15 minutes, as this can damage the non-stick coating and the pan
- . Do not move the unit whilst in use. The use of protective gloves is recommended.
- To light the appliance, light a match or barbecue lighter, turn on the cylinder valve by turning the control knob in an anticlockwise direction to the open position and light the appliance burner (C).
- Use the control knob to adjust the flame intensity to the desired level by turning the knob clockwise to decrease the flame and anticlockwise to increase the flame (See Fig. 2).
- Cooking temperatures are easily adjusted to suit your own requirements by turning the Cylinder valve control key or knob to regulate the
 degree of heat. A feature of the Skottel BBQ is that it offers various heat zones. This is very useful as some foods cook quicker than
 others and the food that is ready first, can be moved to the cooler areas of the dish to keep warm whilst the balance of the food is still
 cooking.
- Useful optional accessories are the Skottel Food Warmers that attach onto the Skottel BBQ to keep food on the edge where it remains
 warm without drying food out or over cooking. See Spares and Accessories table.
- When using the appliance in windy conditions always try to use the appliance in an area shielded from wind as high winds will affect the performance of the appliance and the flame may damage the unit in high winds.
- To pack away, let the unit cool off. After cleaning, place the appliance in clean and dry place.

5. Changing the Gas Cylinder

- Check that the burner is extinguished before disconnecting the appliance from the gas cylinder by turning the control knob fully closed as shown in Fig 2.
- To disconnect the appliance from the gas cylinder, unscrew the stem from the cylinder in an anti-clockwise direction after removing the grill plate and burner pan from the stem.
- · Check the seal before replacing the gas cylinder.
- Change the gas cylinder outdoors and away from other people.

6. Troubleshooting

- A normal flame is blue and may have an orange or yellow tip. If the flame is completely yellow, it may be that the jet is not securely
 fitted. Re-tighten to give a gas tight seal. An overfilled gas cylinder can also cause large yellow flames. Cylinder should be returned to
 filling station and checked by weight.
- Check that the air holes in the adaptor are clear and free of obstructions (Fig.2).
- If the flame power drops or the gas will not light, check that the gas cylinder still contains gas (shake to hear the noise made by the
 liquid). If there is still gas, the jet might have become blocked or partially blocked.

7. Cleaning and Storage

- After cooking, leave the burner on low with soapy water in the cooking dish to soften cooking residue. When satisfied that excess fat
 has been removed, wash the Skottel BBQ in warm water using a suitable non-abrasive detergent. Do not use sharp metal objects or
 abrasive detergents on the vitreous enamel coated surface.
- After cleaning, unscrew the appliance and store both in a cool dry place away from heat.

8. Maintenance

- REPLACING A BLOCKED JET
- Should the hole in the jet become blocked, this may result in a small flame or no flame at all. Do not attempt to clean the jet with a pin or
 other such device as this may damage the orifice, which could make the appliance unsafe.
- Ensure the cylinder valve is closed.
- If the appliance was in use, it will be hot. Allow to cool before attempting any maintenance.
- Unscrew the appliance from the gas cylinder.
- Remove the Mesh and Filter using a very thin flat screwdriver. The Jet is now visible to remove. Unscrew the jet from the adaptor using a
 suitable size flat screw driver. Do not use pliers to remove the jet as this may damage the jet, making it unusable or impossible to remove.
- Screw a new unique No. 23 CADAC jet (See Section 9), ensure a gas tight seal. Don't over tighten the jet. Then place the mesh, followed by the filter.
- REPLACEMENT OF SEALS
- . Remove the rubber seal (G) without damaging the seat, replace it with a new seal making sure it is well seated.









9. Spares and Accessories

· Always use genuine CADAC spares and accessories as they have been designed to give optimum performance.

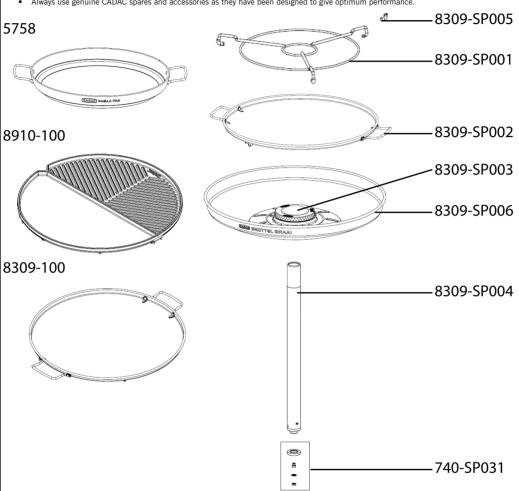

10. Returning the Appliance for Repair or Service

- Do not modify the appliance. This may cause the appliance to become unsafe.
- If you cannot rectify any fault by following these instructions, please return the appliance to your local CADAC distributor for inspection / repair.

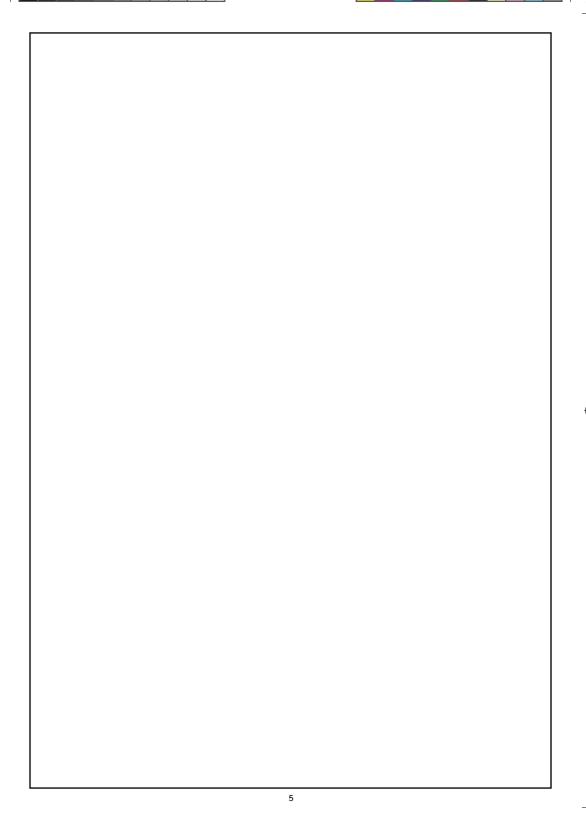







CADAC INTERNATIONAL P.O. Box 43196, Industria, 2042 South Africa Tel: +27 11 470 6600 Fax: +27 11 472 9401 Email: info@cadac.co.za

CADAC EUROPE Ratio 26, 6921 RW Duiven The Netherlands Tel: +31 26 319 7740 Fax: +31 26 319 7743 Email: info@cadaceurope.nl www.cadaceurope.com

CADAC GERMANY Ratio 26, 6921 RW Duiven The Netherlands Tel: +31 26 319 7740 Fax: +31 26 317 7743 Email: info@cadaceurope.nl www.cadaceurope.com

CADAC ZIMBABWE
Exclusive Brands Africa
Unit 8 Birkenhead Park
43 Josiah Chinamano Street
Belmont, Bulawayo
Tel/Fax: +263 971 740
(Bulawayo)
Tel/Fax: +263 479 2564
(Harare)
www.cadac.co.zw

CADAC MALAYSIA
KATRIN BJ SDN BHD (90816-M)
No 12, Jalan TP2, Taman
Perindustrian SIME UEP,
47600 Subang Jaya, Selangor
Darul
Ehsan, Malaysia.
Tel (603) 8023 3939
Fax (603) 8023 3339
info@katrinbi.com

CADAC GREECE
Thessi Mandra Ntouni
Koropi194 00
Athens Greece
Tel: +30 210 602 1019
Fax: +30 210 662 8888
Email: y.economou@camper-gaz.gr
www.camper-gaz.gr

CADAC AUSTRALIA
CADAC-BBQ Pby td, Australia
Tel: +61 420 503 967
Customer Care: 1300 135 011
Fax: +61 755 728 682
Email: info@cadacbbq.com.au
www.cadacbbq.com.au

CADAC FRANCE Le Viallon, 42520 Veranne France Tel: +33 4 74 78 13 65 Email: info@cadaceurope.nl www.cadaceurope.com

CADAC NEW ZEALAND Riverlea Group (Pty) Ltd 2A Maui Street, Pukete, Hamilton 3200, New Zealand Tel: +64 7 847 0204 Fax: +64 7 847 0205 Email: sales@riverleagroup.co.nz www.riverleagroup.co.nz

CADAC HONG KONG Everything Under The Sun 902 Horizon Plaza, 2 Lee Wing Street, Ap Lei Chau, HK Tel :+852 2554 9088 Fax: +852 2818 8595 Email: craig@everythingunderthesun.

CADAC DENMARK Camper Fritid Industrivej 11 6640 Lunderskov Denmark Tel.: +45 7558 5255 Fax.: +45 7558 6312 info@camper.dk

CADAC CHINA
Room 807, Huayue International
Building, No.255 Tiangao Road,
South
Yinzhou business district,
Ningbo, China
Zip:315199
Fax:+86 574 87364160
Tel:+86 574 87723937
Email: info@cadac.com.cn

CADAC SAUDI ARABIA Noble Ventures 34 Ibn Saad Al Kathib Street, Khalidiya, Jeddah, 21435, Kingdom of Saudi Arabia info@nobleventures.co CADAC UK
1 Open Barn
Backridge Farm Business Centre
Twitter Lane, Bashall Eaves
Clitheroe, BB7 3LQ
United Kingdom
Tel: +44 333 200 0363
Fax: +44 333 200 0364
Email: info@cadacuk.com
www.cadaceurope.com

CADAC Mozambique Exclusive Brands Africa 492 Avenida Namaacha Maputo, Mozambique Tel: +258 21 406254 www.cadac.co.mz

CADAC ITALY Brunner SRL/GMBH via Buozzi, 8 39100 Bolzano (Italy) PIVA 00848790218 Tel: +39 0471 542900 Fax: +39 0471 542905 Email: info@brunner.it www.brunnerinternational.com

CADAC USA 50 Mountain View Road Warren, NJ, 07059 Tel: 908 604 0677 Mobile: 908 463 9828 Email: cadacusa@yahoo.com

CADAC CZECH

RÖSLER Praha spol. s r.o.
Výhradní zastoupení
pro ČR a SR
Elišky Junkové 1394/8, 102 00
Praha 10, Česká republika
Tel.: +420 267 188 011
Fax.: +420 272 651 046
E-mail: obchod@rosler.cz
www.rosler.cz

CADAC TURKEY
And Dayanikli Tuketim Mallari San.
Ve Tic. Ltd. Sti.
Gumuspala Mah. E5 Yanyol Cad.
No:196 34320 Avcilar/Istanbul/
Turkey
Tel: +90 212 590 38 38
Fax: +90 212 593 02 45
Emil: ygunaydin@andoutdoor.com
www.grilliguru.ee

CADAC SINGAPORE Hy-Ray Private Limited 40 Jalan Pemimpin, #02-10, Tat Ann Building, Singapore 577185 Tel: +65 6253 2277 Fax: +65 6251 8760 Email: info@hyray.com.sg

CADAC SOUTH EAST EUROPE Borska 45E 11 000 Belgrade Serbia Tel: +381 11 339 2700 Email: office@cadac.rs www.cadac.rs

CADAC KOREA Suite 502 Pika Bldg. Hogye-Dong, Anyang-Si, Gyeonggi-Do, South Korea Fax: +82 2 2179 9292 Tel: +82 31 427 5466 cadackorea@gmail.com

CADAC ZAMBIA Exclusive Brands Africa Limited 7225A Kachidza Road Light Industrial Area Lusaka, Zambia Tel: +260 (0)969 515908 Email: info@ebagrp.com

Picnico General Trading PO Box 1797 Dubai UAE Tel. nr: +971 4 267 9992 Fax: +971 4 267 9940

CADAC UNITED ARAB EMIRATES

CADAC ESTONIA Alvar Landson Grilliguru OÜ Kadaka tee 7/2 12915 Tallinn Tel: +372 5104855 www.grilliguru.ee

Email: showroom@picnico.ae

CADAC SWEDEN Kama Fritid AB Box 114 560 27 Tenhult Sweden Tel: +46-(0)36-35 37 00 info@kamafritid.se

CADAC ISRAEL PO.box 8122819 Hayarden 13, Yavne, Israel Tel: +972-73-2595666 Fax: +972-8-942968 Email: grill@i-berman.co.il



